



KT-e08

UNIVERSAL A/C REMOTE CONTROL
KT-e08 Brand Code Table

6000 in 1

Brand	Model Code	Brand	Model Code	Brand	Model Code
ALPIN	0252-0253, 1276, 1789	HISENSE	0332-0335, 0517, 1868, 2895	Sabro	0435, 0506-0508, 0947, 3578
AUCMA	0288-0296, 0462, 1826, 3534	HITACHI	0118-0126, 1656, 2173	SAJU DENKI	0212-0215, 0724, 2262
AUX	0297-0300, 0451, 1834, 3011	HUABAO	0336-0344, 2384, 2903, 4905	SAMPO	0424-0426, 1448, 2985, 5450
BANSHEN	0264, 1288, 2824	HUAKE	0408, 0920, 1501, 3480	SAMSUNG	0188-0196, 0516, 0518, 1212
BOERKA	0383, 0434, 0436	HUAMEI	0402, 0460-0465, 2962, 3986	SANYO	0046-0095, 0529, 0530, 1070
CARRIER	0203-0209, 0456-0458, 0482-0486, 0563-0565	HUALING	0317-0325, 0452, 2365, 3524	SASUKI	0254, 0470, 1494, 2814
CHANGHONG	0301-0308, 2349, 3890, 4905	HUIFENG	0370, 2418, 3442	SHANGLING	0384-0388, 0444-0445, 3407
CHIGO	0379-0382, 0515, 1912, 2940	HUIKANG	0368, 0441-0443, 1978, 3440	SHANXING	0392, 0449, 0612, 0904, 1985
CHOFU	0184-0187, 1208, 2233, 4330	HYUNDAI	0202, 0433, 0480, 0551, 3552	SHARP	0096-0106, 0525, 1122
CHUNLAN	0345-0350, 0450, 0453, 3522	JDC	0373, 0440, 2488, 3957	SHENGFENG	0376, 0480, 0888, 1911
CORONA	0155-0163, 0459, 2204, 3531	JIANGNAN	0432, 1456, 3607, 4906-4915	SHINCO	0351-0354, 0454-0456, 3935
CONROWA	0377, 0889, 1315, 2937	JINTAR	0414, 1950, 3998, 4655-4669	SHUANGLU	0376, 0404-0407, 0480, 1400
CONSUL	0463, 1999, 3535, 4335-4650	JINSONG	0389-0391, 0446-0448, 3463	SHUAIKANG	0288, 0800, 5450-5643
DAEWOO	0203-0209, 0406, 1430, 3792	JOHNSON	0245, 0492, 2028, 3829	SONGGGE	0428-0429, 2988, 3501
DAIKIN	0171-0183, 0566, 0567, 0583	KANGLI	0374-0375, 1911, 2442	SOVA	0409-0410, 1433, 2457
DOCTOR	0221, 0449, 1473, 3805	KELON	0282-0287, 0473, 0485-0488	SUMMER	0427, 1963, 5644-5700
DONGBAO	0355-0361, 1897, 2918, 4652	KLIMATAIR	0225, 0226, 0452, 3297	SUNDURG	0257, 0505, 1529, 2305
DONGXINBAO	0413, 1505, 3485, 4700-4768	KOLIN	0416-0418, 2466, 3488	SWAN	0434, 0516, 0524, 2994
Electrolux	0216-0220, 0569, 1244	KONKA	0397, 0457-0459, 3017	TADIRAN	0246-0251, 0759, 1787, 5701
FEDDERS	0528, 4804, 4820-4900	LG	0197-0200, 0514, 0572, 2248	TATUNG	0419-0420, 2980, 3491
FRESTECH	0277, 0519, 0520, 2325	LIANGYU	0233, 0451, 1987, 3817	TCL	0273-0281, 0570, 0786
FUJITSU	0127-0137, 0464, 0552-0554	LITTLE DUCK	0015-0020, 0530, 1039	TECO	0256, 0473-0475, 1497, 3840
FUNAI	0430, 0481, 3041, 3502	LOREN-SEBO	0255, 0471, 0472, 2007, 3327	TIANDI	0415, 1439, 3999, 5720-5759
GALANZ	0371, 0372, 0521, 1908, 2931	MACQUAY	0234-0237, 0465, 1489, 2794	TOSHIBA	0107-0117, 0489, 0561, 0562, 1001
GENERAL	0127-0137, 0464, 2000, 3712	MICOM	0415, 1439, 2465, 3487	TRANE	0227-0232, 0739, 1101, 1768
GUOQIAO	0244, 0291, 1268, 2851	MIDEA	0260-0265, 0526, 1801, 2820	UNI-AIR	0222-0224, 0450, 1986
GLEE	0398, 0399, 2446, 2959, 5260	MITSUBISHI	0001-0045, 0476-0479, 0552, 0553, 0588, 0582, 5000	WANBAO	0138-0154, 0483, 0652, 0995
GOLDSTAR	0201, 0466-0469, 1737, 3539	NORITZ	0431, 0943, 2991, 5005-5256	WEILI	0393-0396, 1420, 1932
GREE	0309-0316, 0482, 0512, 0513	OMEGA	0559	Whirlpool	0164-0170, 0502, 1526, 5748, 0481, 0993, 5800-5996
HAIER	0266-0272, 0453-0455	National	0138-0154, 0483, 2714, 3722	XILENG	0411, 0412, 0924, 1947
		PANASONIC	0278, 1914, 3962, 5257-5259	XINLE	0400, 0401, 0913, 2960
		PANDA	0210-0211, 0487, 0488, 1234	YANGZI(YAIR)	0403, 1427, 2451
		PHILCO	0421-0423, 0934, 2981	YINYAN	0258-0259, 0326-0331, 0838
		PROTON	0362-0367, 2410, 3435, 5278	YORK	0238-0243, 0751, 1778
		RAYBO	0369, 0438-0439, 0527, 0531	ZHEN BAO	0127-0137, 0464, 2000, 3711



KT-e08

UNIVERSAL A/C REMOTE CONTROL

6000 in 1

- Patent Technology
- One-Key Nonstop Function
- Digital Key Input Code Directly
- Room Temperature
- Permanent Memory



www.everwellparts.com



MADE IN CHINA



www.everwellparts.com

Product Description

Thank you for choosing our remote control.

KT-E08 is a new product with several patent technologies and it was developed by our engineering department.

This thermostat can be used in heat during winter and cool during summer months. KT-E08 is a universal air conditioning remote control with 6000 codes suitable for old and new air conditioning models.

This remote control has several features: Clock, Timer On and Off, Room Temperature Display and Other.

We always offer quality products at the right prices...

Settings

Put 2 AAA (UM-3, R03) batteries as per polar indicated on battery cabin. Choose one of the setting methods as below.

Code Input

1.- Find out the codes from code table, there are many groups of codes of each brand. Please try the first group, if it does not work, try the second, and do it like this until the codes can operate your equipment. Ex: AUCMA, you can choose 0288, if it does not work, please try the 0289.

2.- Press "select" key, the code on LCD flashes. Enter 4 digit codes in turn. Ex: "0288", press "0", "0" stops flashing, press "2", "2" stops flashing, press "8", "8" stops flashing, press the last "8", "8" stops flashing, ending the code input, setting is finished.

3.- Aim to the air conditioner, press "one key", check whether it is working or not, if it works, setting succeeds, if not, try another group until it works.

Automatic Search

If you do not know the brand of your air conditioner, or if your brand is not listed in the code table, please operate as per following steps:

1.- Put the remote control aim at your air conditioner, press the "SELECT" key for 5 seconds and then release, remote control is entering the automatic search status, emit the signal continuously, the code flashes and increases. While the air conditioner receives the signal, and send one buzzer, press any key to confirm.

2.- Put remote aim to the air conditioner again, press "one key", if it works, setting succeeds, if it does not work; repeat these steps until it can be used for your equipment.

Using of One-Key

Whether in summer or winter, when you need to use the air conditioner, just put the remote aim at your air conditioner and press the "One-Key". Remote can judge it is summer or winter according to the current temperature.

In summer, the temperature will be set in 26°C. In winter, the temperature will be set in 20°C. If you feel not comfortable of the temperature, you could use temp "+" or "-" adjust the temperature. Of course, the remote also has the functions of other remotes; you could use it as the original.

Clock Set Up

- 1.- Press the "CLOCK" button, it is blinking.
- 2.- Press the time "+" or "-", setting to the current time.
- 3.- Press the "CLOCK" button again, stop blinking, the time setting is complete. (If you did not press the "time" button, it can be setting automatically after 5 seconds)

Timer On and Off

No matter whether the air conditioner on or off you could set the timer on and off at the same time.

1.- Press the "TMR on" button, the LCD displays the clock signal and time blinking. Press "TIME/code" "+" "-" button, adjust to the required time, and it will confirm the time of turn on after 5 seconds.

2.- Press the "TMR off" button, the LCD displays the clock signal and time blinking. Press "TIME/code" "+" "-" button, adjust to the required time, and it will confirm the time of turn off after 5 seconds.

Note:

- 1.- The frame can be set between 00-24 hours;
- 2.- Press the "timer on" or "timer off" two times continuously, cancels the timing.
- 3.- After timing setting, the launch direction of remote control must be aimed at the receive direction of your air conditioner in the effective distance, otherwise the timing setting is ineffective.

Temperature display

Press "temp" to display the room temperature, and it will return to setting temperature after 5 seconds, so you could use it as a thermometer, offer convenience for controlling the temperature anytime.

Attention

- 1.- If not used for a long time, remove the battery to avoid leakage liquid of battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.
- 2.- As usual the LCD only displays the time when pressing model codes "Enter" key, you can find the code and it is showed on LCD. After 5 seconds it returns time.
- 3.- Check carefully that there is no object between remote control and air conditioner when the time on/off does not work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
- 4.- The manufacturer keeps the right to change the parameter and function of product.

Technical Parameters

Controllable distance: Larger than 8 meters (According to the machine)

Battery model: Battery AAA(UM-4, R03)X2

Dimension: L133mm x W45mm x D23mm

Weight: Approx 52g (excluding the batteries)

Technical Parameters

•The final explanatory right is reserved by this company. Any alteration on the design and model will not be further notified.